

INSTRUCTION SHEET

FOR FIREBACK MODELS • FB1515 • FB1618 • FB2020 • FB2424 • FB2727

No tools required. Please make sure to remove the support brackets from the box before discarding it.

Firebacks help to protect the walls of the heat chamber from premature cracking and degradation. Their purpose is also to boost a fireplace's heat output by radiating heat into the room and reflecting and projecting more of the fire's heat and light into the room.

STEP 1

 
Remove everything from the fireplace, including grates. Clean completely cool fireplace thoroughly with a broom or ash vacuum.

STEP 2


Some people prefer to just lean the fireback against the wall of the fireplace. Others prefer to utilize the support brackets (feet) included in the package to hold the fireback in position. It should be centered and placed about 1 inch from the back wall of the fireplace.

STEP 3

The slots in the brackets allow for a slight forward angle, straight upright position, or a slight backward leaning stance. You may choose whichever position you find most suitable.

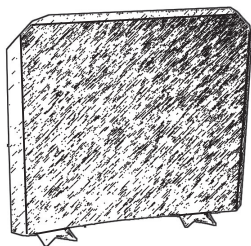

FRONT POSITION

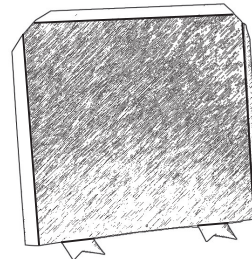 

MIDDLE POSITION